


# BLADERUNNER™

## REPLACEMENT BLADES

### INSTRUCTIONS

Replacing your BladeRunner rotors is easy. Follow these instructions and you will be back in the air in no time!

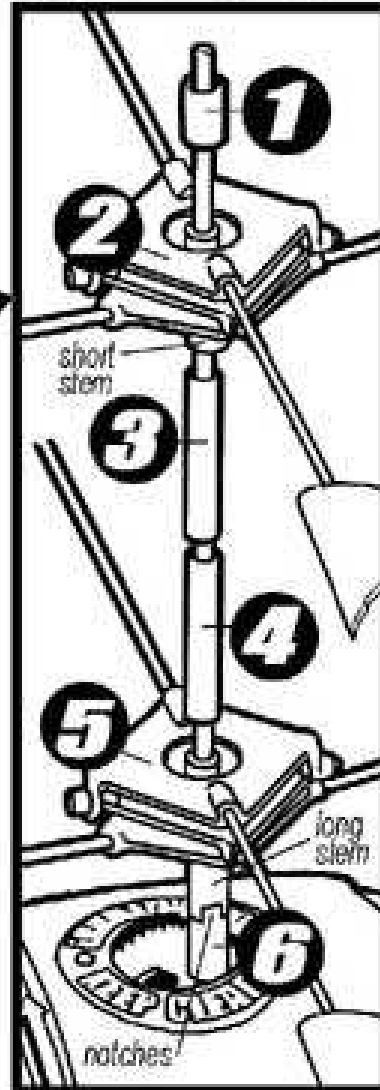

### Component List

1. Capping Tube. (clear plastic)
2. Top Rotor. (short stem)
3. Spacer. >(no difference)
4. Spacer. >(no difference)
5. Base Rotor. (long stem with notch)
6. Motor Mount. (fixed to helicopter)

### Instructions

Insert the base rotor stem down onto the motor mount. (line up the half circles inside the tube). Slide down till the notches interlock.

Slide down the 2 spacers.

Next slide down the top rotor.

Now, holding the bottom of the helicopter slide the capping tube down to meet the top spacing tube. Squeeze all components together.

Keep instructions for future reference.

Contact us: [www.interactivetoy.com](http://www.interactivetoy.com) or call: 1-866-214-2220